

Change Carbon Brush for [DP6388B airless paint sprayer](#)

Prepare: 5mm Hex Wrench; Straight Screwdriver; Shear; Needle nose pliers or vice; heat gun or hair dryers:



Step 1: Remove screws and shell. (5mm. Hex Wrench)




Step 2: Cock up top and under buckle, Remove motor cover (Straight Screwdriver)



Step 3: Remove two wire of motor. Socket color is green.



Step 4: Remove motor Cover

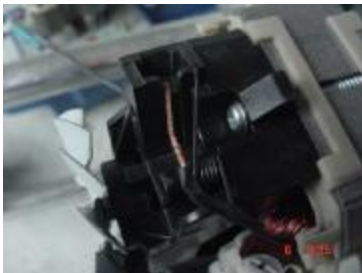

Step 5: Move out brush compression bar



Step 6: Cut off the Carbon brush line. (Shear for Brass wire)



Step 7: Put heat shrinking tube in carbon brush side. Take the snap-fit between motor wire and carbon brush wire.



Step 8: Compect snap-fit hard. Lock the motor wire and brush wire together. (needle nose pliers or vice)



Step 9: Put the heat shrinking tube on snap-fit's location. Try to make 50°C wind on tube. Tighten the wires.(heat gun or hair dryers)

At the end, please put the carbon brush in the hole, and put the compression bar back. Assemble motor cover, plug motor wires. Take on the shell.